

SERVO MOTOR CONNECTORS

CONN	FUNCTION
J11	POST DISPERSION. PRISM STAGE
J12	-
J13	IMAGE FLAT STAGE
J14	LOW DISPERSION FLAT STAGE
J15	-
J16	-
J17	-
J18	-
J19	MANUAL CONTROL PADDLE

STAGE ENCODER CONNECTORS

CONN	FUNCTION
J31	-
J32	
J33	
J34	
J35	
J36	
J37	
J38	

PNUMATIC STAGES

CONN	FUNCTION
PJ20	SOLENOID CONTROL #2
J56	HATCH & AIR PRESSURE
J57	-
J58	
J59	

STAGE BRAKES

CONN	FUNCTION
J51	POST DISP PRISM BRAKE
J52	-
J53	IMAGE FLAT BRAKE
J54	LOW DISP FLAT BRAKE
J55	

LOGIC SUPPLY DISTRIBUTION

CONN	FUNCTION
J10	GALIL CONT. #0 AMP A
J20	GALIL CONT. #0 AMP B

REVISION

11/19/97 UPDATED PNUMATIC STAGES
 01/15/98 UPDATED PNUMATIC STAGES
 03/03/98 Added J52.
 09/01/98 Added AIR PRESS TO J56
 3/11/99 REMOVED LAMP STAGE CONNECTORS
 2-29-99 ADDED LOGIC SUPPLY DISTRIBUTION CONNECTORS, J10 & J20

**UNIVERSITY OF CALIFORNIA
 LICK OBSERVATORY**

**CONNECTOR ASSIGNMENTS
 CONTROLLER #1
 ESI SPECTROGRAPH**

DES'N BY: B. Alcott

ORIGIN DATE: 3/14/96

DWG. NO.

NUM. 1 OF 1

DRAWN BY:

MODIFY DATE: 2-29-99

PATH: ESI\CONASGN2

REV. A

EL-3334-1D