


MS3106A-20-29S
MS3057-12 Clamp with boot

MS3106A-20-29S
MS3057-12 Clamp with boot

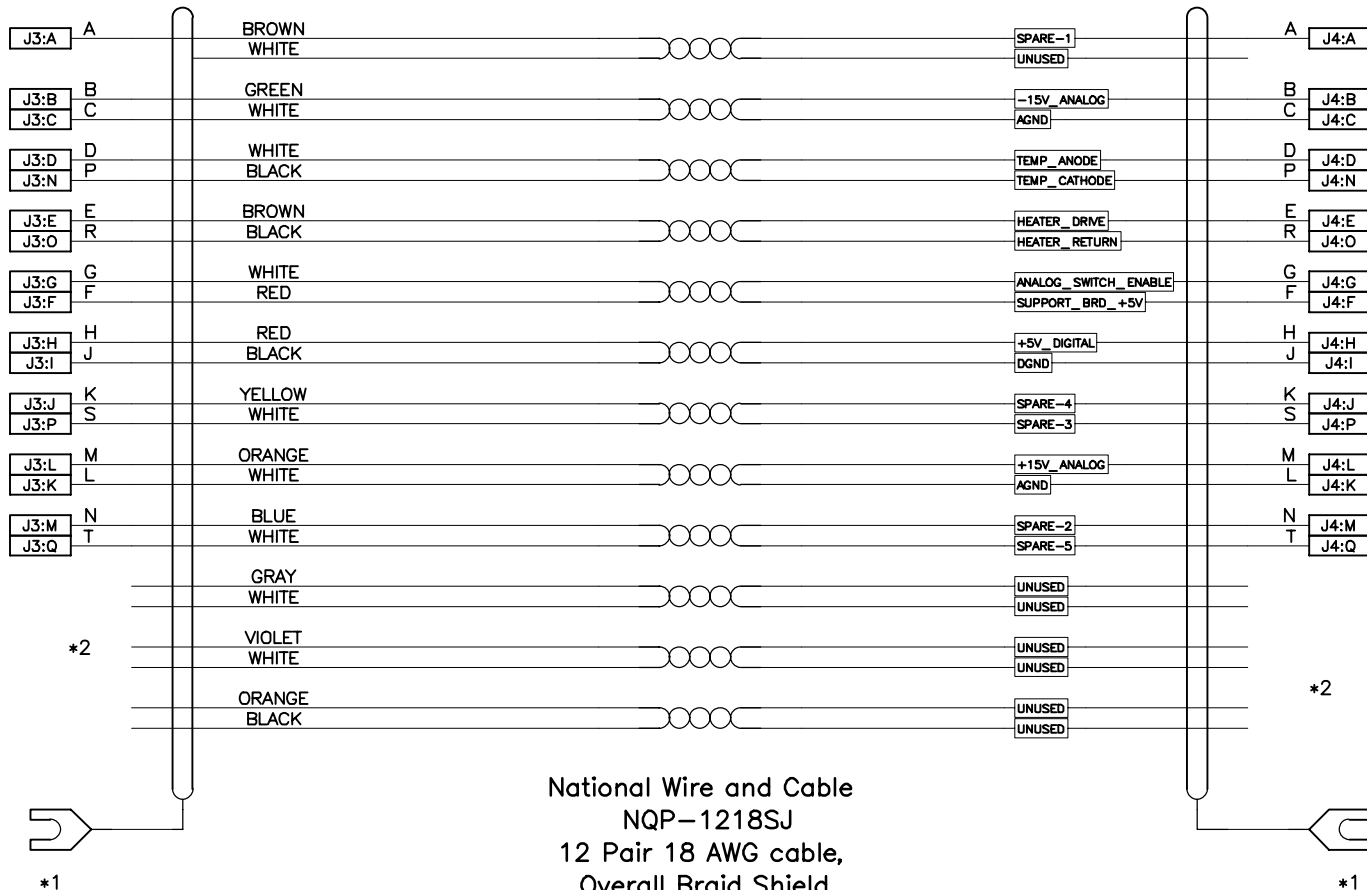

*1: Overall shield drain wire connected to #8 spade lug for termination at chassis. Leave enough wire length to reach chassis mounting post.

*2: Cover unused pair wire ends with heatshrink tubing.

UNIVERSITY OF CALIFORNIA LICK OBSERVATORY		CCD CABLES FOR SDSU2 17 PIN	
REVISION		DES'N BY: L. BRESEE	ORIGIN DATE: 07-26-97
3/25/99 CHANGED EL NUMBER FROM EL-3172 TO EL-3185		Last SN: 0005	MODIFY DATE: 3/25/99
		PATH: ::\DEIMOS\SDSUCCD2\17CAB.SCH	REV. A
		DWG. NO.	NUM. 1 OF 1
		EL-3185-1W	